

How to Run Generators:

- Push Gas lever to the right to turn the gas on (red on, white off) (note there is a manual Needle & Seat near the gas tank as well)
- Push Choke to the Left (red is on) (white is off)
- Make sure Idle Control is on
- Main Circuit Barker should be on “Up position”
- Press the “ON” side of the start button
- Once Started turn choke off
- Distribute power cords evenlyyou will see 2 vertical strips where you can plug your extension cords in. Plug a cord on each side...do not put the cords all on one side (each side is 120 volts only).
- These generators are to be used for the following (never run the air-conditioning or appliances when using these generators)
 - Sonic Walls
 - Modem's
 - Terminal, (Dispatch Computer Monitor with ODT installed, and the **Network Switch**)
 - Printers (Invoice and Label)

Hard Start – If battery is dead you can start machine manually with the pull cord.

When you turn the generator off:

- Press “Off” side of button – **make sure you don't press the “ON” side as this will engage**

Monthly Maintenance:

- Check Gas (should be 90% full)
- Check Oil
- Make sure battery is charged
- Have a 5 gallon gas can 90% full on hand
- Start machine following instructions above let machine run for 10 minutes.
- Make sure Flash light is close to counter